



Micro-ISP

Series IV

**FIRMWARE
UPGRADABLE**

Serial Programming Systems
for the Atmel 89S, AT90S (AVR) &
ATmega microcontroller families

USER GUIDE

(Version 2.03)



The Embedded Solutions Company

Copyright Information

Equinox guarantees that its products will be free from defects of material and workmanship under normal use and service, and these products will perform to current specifications in accordance with, and subject to, the Company's standard warranty which is detailed in Equinox's Purchase Order Acknowledgment.

Equinox reserves the right to change specifications detailed in this document without notice and does not represent a commitment on the part of the manufacturer. The software described in this document is furnished under license agreement or non-disclosure agreement and may be used

or copied only in accordance with the terms of the agreement.

It is against the law to copy the software on any medium except as specifically allowed in the license or non-disclosure agreement.

The purchaser may make one copy of the software for backup purposes. No part of this manual may be reproduced or transmitted in any form or by any means, electronic, mechanical, including photocopying, recording, or information retrieval systems, for any purpose other than for the purchaser's personal use, without written permission.

© 1998 Copyright Equinox Technologies UK Limited. All rights reserved.

Atmel™ and AVR™ are trademarks of the Atmel Corporation
Microsoft, MS-DOS, Windows™ and Windows 95™ Windows NT™ are registered trademarks of the Microsoft Corporation
IBM, PC and PS/2 are registered trademarks of International Business Machines Corporation

Every effort was made to ensure accuracy in this manual and to give appropriate credit to persons, companies and trademarks referenced herein.

Disclaimer

Please note about diagrams contained within this document:

Whilst suggested circuits are offered in good faith, Equinox will not be liable in any way for any problems which might arise out of their use.

Electromagnetic Compatibility (EMC) Compliance

The Micro-ISP Programmer is a CE Approved Product. It is designed only for use in a development environment only. This means that the user must ensure that there is no possibility of damage from electrostatic discharge (ESD). Since the devices and equipment to which this product is likely to be connected may well themselves be susceptible to ESD, this should not pose any difficulty.

For example, if you are handling microcontrollers and EEPROMS etc. then you will already be used to appropriate precautions, such as the use of anti-static mats, wrist straps and so on. You should treat your Micro-ISP with the same care as you would these type of device. Always ensure that you are not yourself carrying a static charge before handling the product. Wearing an earthed anti-static wrist strap is recommended.

Equinox have taken great care in designing this product to be compliant with the European EMC directive. When using the equipment be sure to follow the instructions provided. Although RF emissions are within prescribed limits, care should be taken if you are using the product near to sensitive apparatus. If you experience any difficulty please refer to Equinox technical support.



ESD Points to remember

- Work in a static-free environment.
- Wear an earthed wrist strap when handling either the programmer and/or any programmable device.

Please Note:

This equipment is designed for use in a 'Development Environment' only and is NOT guaranteed to operate correctly in a 'Production Environment'.

Use of this product in a 'Production Environment' will invalidate your warranty.

Technical Support

It is often the case that users experience problems when installing or using a product for the first time. Due to the low-cost nature of this product, Equinox are unable to answer technical support questions about this product or its use by telephone.

If you have a technical support problem, please consult the following list for help:

1 This manual

2 Troubleshooting Guide (see page 28)

3 On-line help

Press <F1> for help at any time.

The help system is context-sensitive. Simply press <F1> on any error message and the possible causes of the error should be listed. This help system is updated on a regular basis. Please see software update details for information on keeping up-to-date with software revisions.

4 Internet Web Site

Equinox have setup an AVR™ microcontroller support page on our web site. This page is designed to provide up-to date information on all issues concerning both AVR™ microcontrollers and support tools.

The microcontroller support page can be found at: **www.equinox-tech.com/avr**

5 E-mail

Please e-mail any technical support questions about this product to: **microisp@equinox-tech.com**

Equinox will try our best to answer your questions about this product as quickly as possible.

However, we can not promise an immediate reply. Please consult our web site for new software updates as the problem that you are enquiring about may have already been fixed in a new version.

6 Fax

Please fax any technical support questions about this product to: **+44 (0) 1204 535555**

Equinox will try our best to answer your questions about this product as quickly as possible.

However, we can not promise an immediate reply. Please consult our web site for new software updates as the problem that you are enquiring about may have already been fixed in a new version.

Contacts

Equinox Technologies UK Limited

3 Atlas House, St Georges Square, Bolton, England BL1 2HB

Telephone Sales : **+44 (0) 1204 529000**

Fax : **+44 (0) 1204 535555**

E-mail : **sales@equinox-tech.com**

Web site : **www.equinox-tech.com**

For technical support on this product please e-mail us at:
microisp@equinox-tech.com

Software Updates

In line with our policy of continuous improvement, the 'Meridian for Windows™' software is updated on a regular basis. The firmware of the actual programmer is also periodically updated. If you would like to receive an automatic e-mail every time a new version is released, please make sure you have registered your system with Equinox and you have quoted your e-mail address. You may cancel this service at any time.

The Meridian software updates can currently be downloaded from the following places:

Internet : www.equinox-tech.com
Select <software> this will take you to the software download page

About AVR Microcontrollers

Atmel manufacture a complete family of AVR and 89S microcontrollers each with differing FLASH, EEPROM, SRAM and number of I/O pins. Data sheets for these devices can be viewed and printed using the Acrobat pdf reader software supplied on the Atmel CD-ROM. As data sheets are often updated on a regular basis, it is recommended that you consult the Atmel web site for the latest information.

A few sources of further information about Atmel AVR microcontrollers are listed below:

Atmel web site : www.atmel.com

Equinox web site : www.equinox-tech.com/avr

If you have any silicon related technical support question about AVR and 89S microcontrollers which can not be answered by looking at the Atmel/Equinox web sites, please e-mail:

AVR - avr@atmel.com

89S - mcu@atmel.com

with a detailed description of the problem.

Important - Please note

Equinox Technologies is unable to answer direct technical support questions concerning AVR microcontrollers. Please contact your local Atmel distributor or sales office if you require any further information.

Contents

Introduction	1
Device Support	2
System Specifications	3
Hardware Overview	4
Hardware/Software Installation Overview	5
Meridian for Windows Overview	6
Hardware Installation Instructions	7
Serial Port Selection	8
Software Overview	9
Device Programming Guide	11
In-System Programming Overview	18
ISP Header Pin Assignments	19
ISP Cable Convertor	20
Target System Requirements	21
Atmel AT89S/89LS - ISP Notes	22
Atmel ATmega103/603 - ISP Notes	24
Atmel AT90S/ATtiny - ISP Notes	25
Upgrading the Programmer Firmware	26
Micro-ISP Compatible Target Systems	27
Troubleshooting Guide	28

Introduction

The Micro-ISP is a state-of-the-art device programmer supporting the new range of In-System Programmable (ISP) microcontrollers from Atmel. These microcontrollers feature serially downloadable memory allowing both CODE and DATA (if device features EEPROM) areas to be updated in-system without physically removing the target device from the application board. The serial programming is based around the industry standard SPI protocol which is a 3-wire bus featuring two data lines and a clock line.

The Micro-ISP programmer currently supports the Atmel 89S, AVR™(90S), ATmega and ATtiny microcontroller families as standard.

The Micro-ISP programmer features extremely fast programming speeds due to the use of dedicated hardware to generate the SPI waveforms.

Please Note:

This programmer is designed for development use only.

MICRO-ISP DEVICE PROGRAMMER HIGHLIGHTS

- State-of-the-art Device Programmer
- Supports In-System Programming (ISP) of:
 - Atmel 89S microcontroller family
 - Atmel AVR(90S) microcontroller family
 - Atmel ATmega microcontroller family
 - Atmel ATtiny microcontroller family
- Powerful Windows Interface Software - Meridian compatible with Win3.1, 95, 98 & NT
- Device Manufacturer Certification for many algorithms
- Connects to spare PC Serial Port
- Straightforward hardware/software installation
- Supports programming of security lock bits
- The programmer firmware is field upgradable allowing new devices and enhancements to be added in the future

FAST programming times due to:

- Enhanced serial programming algorithms
- SPI programming waveforms generated by dedicated hardware

Two versions of the programmer are available:

- Standard voltage : **UISP-S4** (4.8-6.0V)
- Low voltage : **UISP-LV4** (3.3-6.0V)

Device Support

ATMEL 89S FLASH Microcontroller Family

AT89S8252	AT89LS8252
AT89S53	AT89LS53

Atmel AVR 'Classic' Microcontroller Family

AT90S1200	AT90LS2333
AT90S1200A (<i>same as AT90S1200 with RCEN Enabled</i>)	AT90LS4433
AT90S2313	AT90LS4434
AT90S2323	AT90LS8535
AT90S2333	
AT90S2343	
AT90S4414	
AT90S4434	
AT90S8515	
AT90S8535	

Atmel ATmega FLASH Microcontroller Family

ATmega103	ATmega103L
ATmega603	ATmega603L

Atmel Tiny FLASH Microcontroller Family

ATtiny22

Please note: Only ATtiny devices which feature a 'Low Voltage Serial Programming Mode' are supported.

Caution. Make sure you do not exceed the maximum voltage of the target device.

System Specifications

Minimum System Contents

The Micro-ISP Series IV programmer is available as either a +5V or low voltage version. The minimum system contents for both versions are as follows:

- Micro-ISP Serial Download Programmer
- Windows Driver Software
- ISP Cable convertor
- PC Serial extension cable set
- Atmel CD-ROM

Micro-ISP Serial Programmer Specifications

Programmer Size	: 55 x 53 x 16mm
Shipped Weight	: Approx 0.10kg
PC Connection	: Serial Port 25-pin female D Connector
Programming Cable	: Length 300mm
Header	: 10-way IDC 0.1" pitch bump polarised
Power Supply	: Requires power from target system or external power supply.

Series IV Vcc. 4.8 - 6.0V

- I_s (supply) approx 50mA when programming
- I_s (supply) approx 27mA in standby

Series IV LV Vcc. 3.3 - 6.0V


- I_s (supply) approx 36mA when programming @ 3.3V
- I_s (supply) approx 22mA in standby @ 3.3V
- I_s (supply) approx 70mA when programming @ 5V
- I_s (supply) approx 37mA in standby @ 5V

Minimum PC requirements

The minimum hardware and software requirements to ensure that the programmer operates correctly are as follows:

- 100% IBM compatible 386+
- Windows 3.1 or higher
- Minimum 4MB RAM
- Minimum 1MB free hard disk space
- Spare PC serial port

Hardware Overview

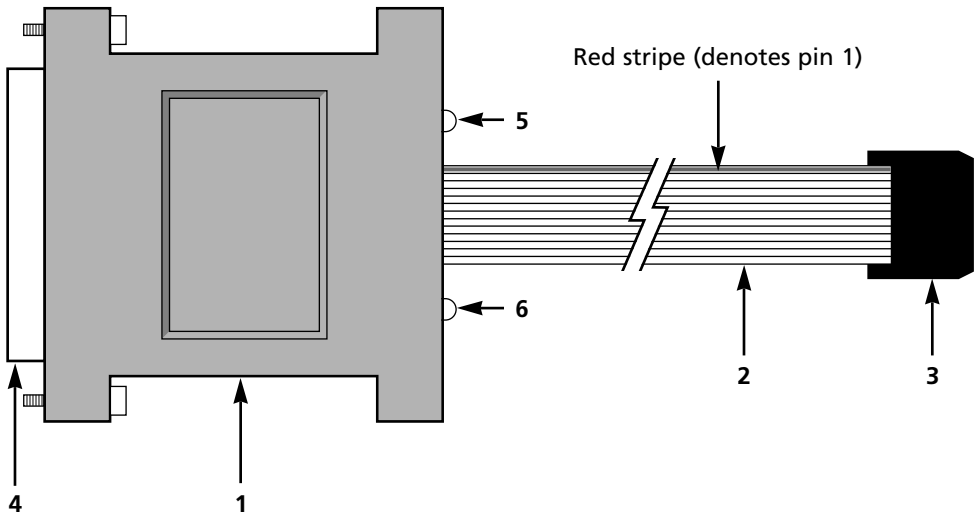


Key

- 1 Micro-ISP Programmer
- 2 Serial Programming Cable (length approx 300mm)
- 3 10-way IDC Header Plug
- 4 25 pin female D-Connector (plugs into PC serial port)
- 5 Power LED
- 6 Active LED

Hardware/Software Installation Overview

The Hardware/Software Overview for the installation process of the Micro-ISP programmer is detailed diagrammatically below. Please refer to the following pages for a more detailed explanation.

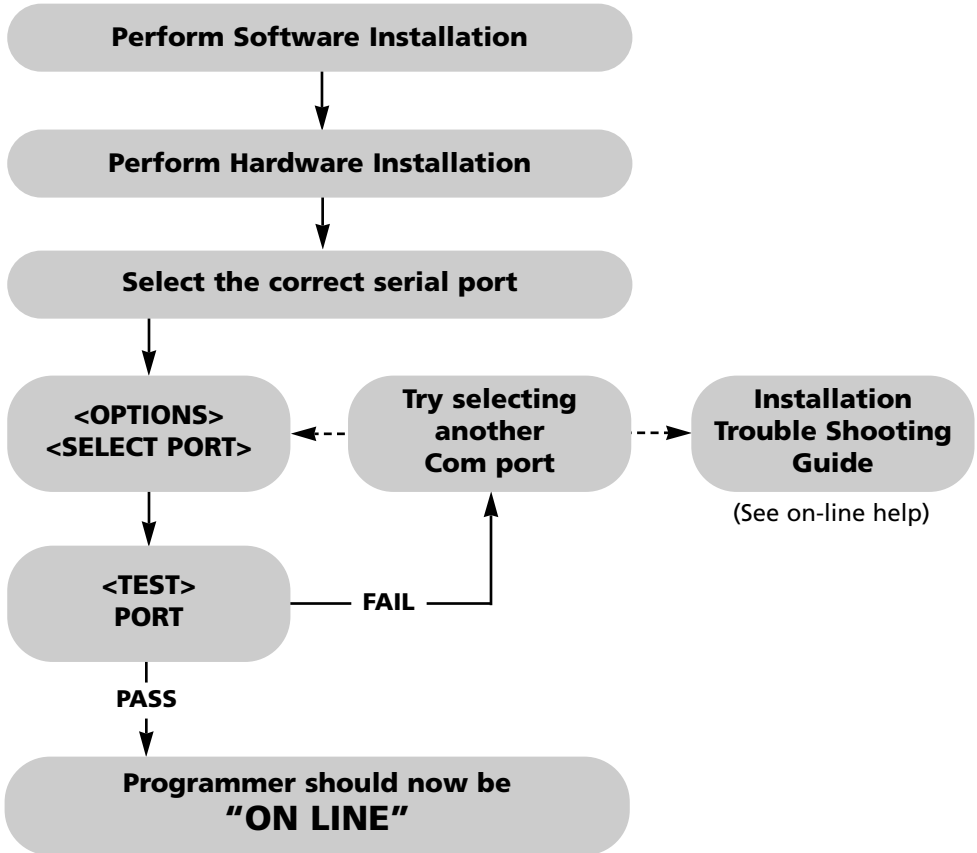

Meridian for Windows Overview

The Micro-ISP programmer is supplied with 'Meridian for Windows' PC driver software. This software is supplied on one 3.5" floppy disk or can be downloaded from the Equinox web site.

Meridian Programmer Interface Software

- Powerful Windows Programmer Interface Software compatible with Windows 3.11™ Windows 95™, Windows 98™ & Windows NT™
- Device: Check, Signature, Erase, Blank Check, Read, Program, Verify, Special Options and Security
- Supports programming of microcontroller fuse bits
- Programmable RESET polarity
- Powerful RESET Timing utility allows most RESET circuits to be accommodated including C/R, External Watchdog and 3-pin CPU supervisor devices
- Powerful Auto-Program Utility
- Fast programming times due to dedicated SPI Hardware
- Powerful Multiple File Loading Utility
- Supports Bin & HEX file formats
- Comprehensive context-sensitive on-line help system

The Meridian software was introduced by Equinox to support the following range of programmers:

Micro-ISP Series III

Micro-ISP Series III LV

Micro-ISP Series IV

Micro-ISP Series IV LV

Activ8r (Atmel 8051 version)

Activ8r (Atmel AVR version)

To Install 'Meridian for Windows' software:

- Boot the PC into Windows environment (Win 3.1, Win 95 or NT)
- Insert 'Meridian for Windows' disk into floppy disk drive (A: / B:)
- Select the 'Run...' command from the 'File' menu in the Program Manager
- Select 'Browse' and navigate to the floppy drive (A: / B:)
- Select 'meridian.exe'
- Select the 'OK' button

The software installation program should now display an introductory screen. Please follow the on-screen prompts in order to complete the software installation process.

On completion, the installation program will install the 'Meridian' icon within a new program group called 'Equinox'.



To launch the software, simply double-click on the 'Meridian' icon.

Hardware Installation Instructions

Overview


The Micro-ISP programmer connects to any spare PC **serial** (COM) port. If you only have one serial port and this is in use for e.g. a modem, it may be possible to add another serial port to your machine by inserting a new I/O card.

For further hardware installation help, please refer to the: **Installation Troubleshooting Guide**

Warning !

To avoid catastrophic damage to PC, programmer or target system:

- Ensure that both your target system and PC are connected to a common earth point.
- Make sure that all interconnections are made before applying power to PC and target system.
- If you are using a laptop or PC which is not connected to mains earth, it is recommended that you make a hard-wired connection from the COM port D-connector shell and the target system to a common earth point.
- Avoid plugging and unplugging ISP connector while either the PC or target system is powered up.
- Please ensure that any devices connected to the user target system are also properly grounded to the same common earth point.
- Please see Diagram

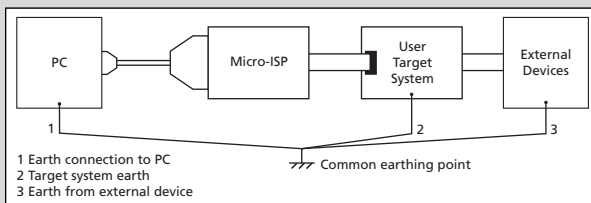

Any damage caused to the programmer through inadequate earthing is not covered under warranty

- 1** Connect the serial cable provided to a spare COM port on the PC using the 9-25 way adaptor if necessary.
- 2** Connect the Micro-ISP to the other end of the serial cable.
- 3** Connect IDC plug at the end of the serial programming cable into the 10-way IDC header on the user target board (not supplied).
- 4** Apply power to the target board. Please ensure that the target system is powered up. The programmer will not operate unless a Vcc in the specified range is applied on pin 1 of the IDC connector. **(The Micro-ISP draws its power from the target)**

Serial Port Selection (Select Port)

The Micro-ISP programmer plugs into a spare serial (com) port of any IBM compatible PC including the majority of laptop machines.

To select the Correct Serial Port

i. From the menu bar select <Options>
<Select Port>

The available COM ports on your computer are now displayed.

ii. Select the COM port to which the programmer is connected

ii. Select a baud rate e.g. 56K

iii. Select <Test>

A programmer communications test is now performed.

This tests both the programmer, cable and PC serial port.

Communications Test Pass

The programmer has been detected OK by the Meridian software. If you now <Cancel> out of the <Test Port> dialogue box, the words 'ON LINE' should now be displayed at the bottom right of the Micro-ISP Window.


Installation is complete and the programmer should now be ready to-use.

Communications Test Fail

The programmer was not detected on the COM port selected. Please check that the correct COM port was selected, and if not, repeat the <Select Port> < Test> operation.

If your PC is not fast enough to operate at the default highest communication speed, it may be necessary to slow the communication down. This can be achieved by choosing a slower baud rate from the list provided.

If the programmer is still not detected, please refer to the Installation Troubleshooting Guide located in the "On-Line" help.

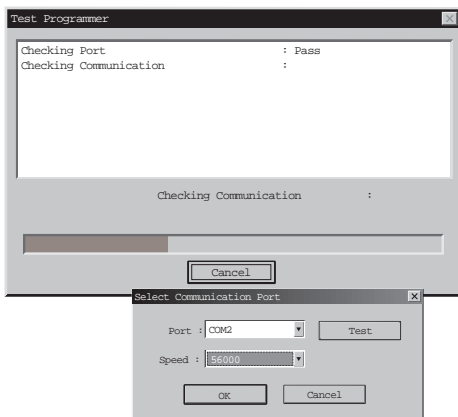


Software Overview

The **Meridian for Windows™** software features many powerful functions which can be activated by simply clicking a single icon. Other utilities and commands are available by selecting the relevant menu option.


For further information about the **Meridian for Windows™** software , please refer to the 'On-line Help System' supplied with the software (F1).

The most commonly used functions for which an icon exits are listed below.

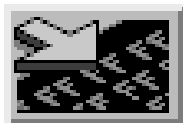

LOAD FILE TO BUFFER (F9 or Ctrl + L)

Allows you to select a file or multiple files and load the file(s) into the programmer buffer area(s). Currently supports Intel Hex and Binary file formats as standard.

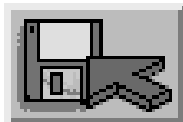

SAVE TO DISK (Ctrl + S)

Allows you to save the contents of the buffer(s) to a file. Currently supports Intel Hex and Binary file formats as standard.



BLANK CHECK

Checks if the currently selected device is blank.
i.e. All locations = FFh



VERIFY DEVICE

Compares the contents of the buffer area(s) with the contents of the currently selected device.



WRITE DEVICE

Writes with contents of the buffer into the device

Note:


This operation does NOT perform an electronic erase before writing data.

Software Overview continued



DEVICE READ

Reads the contents of the currently selected device into the programmer buffer area(s).

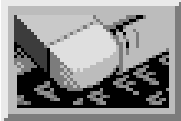

ERASE DEVICE

Performs an ELECTRONIC erase on the currently selected device.



DEVICE AUTO-PROGRAM

Performs a complete programming cycle including Signature Check, Erase, Blank check, Write, Special Options, Security etc.



SECURITY

Allows you to READ/WRITE the security lock bits of any device which supports this feature.

Device Programming Guide

The Micro-ISP Programmer is now ready to program a target device.

In the following example we have chosen to program an Atmel AT90S1200 microcontroller located on the user target system.

1 From Meridian select <Options> <Create Library Info>

This operation interrogates the target programmer and generates a 'notepad' document which details information about your programmer and generates a list of devices supported by the programmer. From the list you can see which 'TARGET ISP' devices can be programmed with the Micro-ISP. i.e. only devices listed as 'yes' or LNR' are supported.

2 To select the target device click on the <Device menu>

Chose <Select>, Chose <AT90S>, Chose <Target (ISP)> and finally click on the target device, in our example <AT90S1200ISP>.

3 From the< Device menu> select<Information>

This will give you a description of the target device.

4 Setting of target write times (LV programmers only)





The write time of the FLASH and EEPROM varies with target voltage. Meridian defaults to the correct settings for +5V. If your target system is powered from less than 5V it may be necessary to change the write time.



To alter the write time settings select <Options> <SPI Program Options>

Enter the recommended 'Write Time' - for the selected device from the tables overleaf

Enter the required 'EE Write Time'. This time is automatically updated to be the same as the 'FLASH write time' for all devices except the ATmega family. Click <OK>.

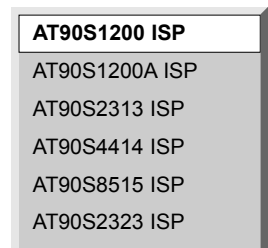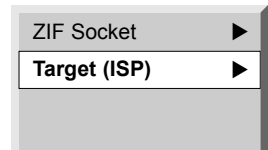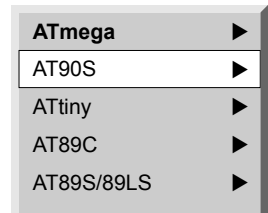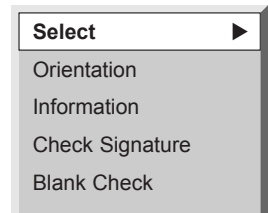

Device Programming Guide continued

Overview

The following tables detail the result of testing the programming of various target microcontrollers in the laboratory. These timings and settings are meant for guidance only. E&OE. Results may differ depending on microcontroller batch, power supply, target system etc.

Definitions:

Voltage	- Supply voltage to programmer and target device
Flash Write Time	- Minimum time to program a byte or page (ATmega only) of the target microcontroller FLASH area
EEPROM Write time	- Minimum time to program a byte of the target microcontroller EEPROM area
Fspi	- Frequency of SPI signal from programmer to target device
Fosc	- Frequency of target microcontroller oscillator
Code time	- Time taken to program the target device CODE area with random data
Data time	- Time taken to program the target device DATA area with random data

All measurements were taken with the following equipment:

Meridian V2.12

PC - DX2-50

Micro-ISP Series IV LV

Windows 95

Communication speed: 56,000 baud

Device Programming Guide continued

AT89S/89LS - Timing Characteristics

Voltage (V)	Flash Write Time (ms)	EEPROM Write Time (ms)	F _{SPI} (KHz)	F _{OSC} (MHz)	Code time (secs)	Data time (secs)
3.0	5	5	15	12	78.5	12.0
3.0	5	5	15	4	78.5	12.0
3.3	5	5	50	12	56.2	14.0
3.3	5	5	50	4	56.2	14.0
3.5	5	5	100	12	54.3	13.5
3.5	5	5	50	4	56.2	14.0
4.0	4	4	50	12	47.4	12.0
4.0	4	4	100	4	45.1	11.5
4.5	4	4	100	12	45.1	11.5
4.5	4	4	50	4	47.4	12.0
5.0	2	2	100	12	29.0	7.5
5.0	3	3	50	4	38.1	9.5
5.5	1	1	100	12	19.8	5.0
5.5	1	1	50	4	23.1	6.0
6.0	1	1	100	12	19.8	5.0
6.0	1	1	50	4	23.1	6.0

For the AT89S/89LS family it is necessary to change both the 'FLASH/EEPROM write times' and the 'SPI Frequency' depending on target voltage and oscillator frequency. The table shows results for 4MHz and 12MHz. The AT89S device should program correctly at >4.0V with a target frequency of 4MHz to 24MHz. The AT89LS should program correctly at 3.0V to 6.0V as long as the target oscillator frequency is 12MHz or below.

Device Programming Guide continued

Atmel AVR 'Classic' Microcontroller Family - Timing Characteristics

Voltage (V)	Flash Write Time (ms)	EEPROM Write Time (ms)	F _{SPi} (KHZ)	F _{OSC} (MHZ)	Code time (secs)	Data time (secs)
3.0	6	6	70	3.6864	65.0	4.0
3.3	5	5	70	3.6864	56.0	3.5
3.5	4	4	70	3.6864	48.0	3.0
4.0	4	4	70	3.6864	48.0	3.0
4.5	3	3	70	3.6864	39.0	2.5
5.0	3	3	70	8	39.0	2.5
5.5	2	2	70	8	30.0	1.9
6.0	2	2	70	8	30.0	1.9

- For the Classic AVR and ATtiny family, it is only necessary to alter the 'FLASH/EEPROM write times' depending on the target voltage.
- Erasing of the target device is not guaranteed below 3.4V. This can cause programming errors as random locations may not have erased correctly. This is a silicon limitation for which there is currently no workaround.

ATMega103/103L - Timing Characteristics

Voltage (V)	Flash Write Time (ms)	EEPROM Write Time (ms)	F _{SPi} (KHZ)	F _{OSC} (MHZ)	Code time (secs)	Data time (secs)
3.8	45	7	70	3.6864	231.1	38
4.0	35	7	70	3.6864	226.1	38
4.5	30	5	70	3.6864	223.4	30
5.0	22	4	70	3.6864	219.2	25

- For the ATmega family, it is necessary to alter the 'FLASH write time' on a per page (256 bytes) basis and the 'EEPROM Write time' on a byte-by-byte basis depending on the target voltage.
- Erasing of the target device is not guaranteed below 3.4V. This can cause programming errors as random locations may not have erased correctly. This is a silicon limitation for which there is currently no workaround.
- Correct programming of ATmega103L devices at voltages less than 3.8V with revision 'K' silicon was found to be unreliable.
- The Micro-ISP Series IV LV' programmer is slower at programming the ATmega103 than the +5V programmer at a given voltage.

Device Programming Guide continued

5 Setting of the 'SPI frequency'

The setting of the 'SPI frequency' also varies with the target voltage. It may be necessary to change the 'SPI frequency' (Fspi).

To alter the 'SPI frequency' select <Options><ISP Settings>

Enter the recommended 'SPI frequency' - see the 'Timing Characteristic Tables'.

These tables show the fastest programming speeds achieved at Equinox Technologies on two different target devices. The optimum timings for these and other devices will vary. It may be necessary to experiment with differing settings to achieve the fastest times.



6 Setting the 'Target Reset Polarity'

Meridian automatically sets the polarity of the programmer RESET signal (PROG_RESET) to be the correct default polarity for the target device being programmed. Some users may wish to change the 'Target Reset Polarity' if the RESET circuit on the target system is inverted for some reason.

7 Setting the 'ISP RESET Timing' parameters

The programmer outputs a sequence of pulses on the PROG_RESET, PROG_MOSI, PROG_MISO, PROG_SCK1 and PROG_LED signal lines in order to force the target device into 'Serial Programming Mode'. The programmer effectively runs a statemachine where the programmer I/O lines are set to certain states for periods of time as specified by the 'T1....T6' timing parameters. The default settings are for a generic Capacitor/Resistor RESET circuit and a target system operating at +5V.

For Atmel AVR, ATmega and ATtiny devices, the default timing parameters should operate correctly for most target systems without any changes. However, the Atmel 895 microcontroller family suffers from many problems in entering 'Serial Programming Mode' correctly if the RESET circuit is changed from a C/R network. The choice of the correct RESET circuit and relevant settings for the 'T1....T6' timing parameters is beyond the scope of this manual. Further information is available in separate application notes to be found on the Equinox Web Site.

Device Programming Guide continued

8 Loading user code/data to the buffer areas

To program the target system the buffer must first be loaded with the user code/data.

- Select <File> <Load to Buffer...>

The 'Load to Buffer' dialogue is now displayed.

- To load a file into the CODE area, click <Browse> in the code section.

Select the required file, click <Load>

This loads the same file into both the code and data areas by default.

- To load a different file into the DATA area, click <Browse> in the data section.

Select the required file, click <Load>

The buffer(s) should now be loaded.

Click <OK> to quite out of the 'Load dialogue box'.

9. Using <Auto-Program> to program a target device

The most straightforward method of programming a target device is to select <Device><Auto-Program> or click the <Auto-Program> icon.

An 'Auto-Program' performs the following actions:

- Pre-programming State machine operation
- Check Signature (except 89S/89LS - no signature)
- Chip Erase
- Blank Check (CODE/DATA areas)
- Write CODE area
- Verify Pass 2 - CODE area
- Write DATA area
- Verify Pass 2 - DATA area
- Write Special Options (Fuse bits etc.)
- Write Security



The auto-program operation is setup by selecting <Device><Auto-program Options>.

Device Programming Guide continued

10. Using the <Device> commands individually

It is possible to fire off any programmer command individually from the <Device> menu.

Please note:

- i. The programmer will, by default, perform a 'Pre-programming State machine operation' and a 'Check Signature' for each operation selected. The 'Check Signature' can be disabled using a ☐ tick box.
- ii. The <Device><Write> operation does not perform a 'Chip Erase' operation. If there is already non-FF data in the target device then the 'Write' operation will fail. A manual <Device><Erase> is required to erase the device.
- iii. The <Device><Special Options> operation allows the user to read the current values of the fuse bits of the target device (if the device supports this). New values can also be written to the target device.

Further sources of information:

Equinox application notes:

- AN100 - ISP Design Notes for the Atmel AT90S (Classic AVR) Microcontroller Family
- AN101 - ISP Design Notes for the Atmel ATmega Microcontroller Family
- AN102 - ISP Design Notes for the Atmel ATtiny (AVR) Microcontroller Family
- AN103 - ISP Design Notes for the Atmel AT89S/AT89LS Microcontroller Family

In-System Programming Overview

It is possible to In-System Program (ISP) members of the Atmel AVR microcontroller by utilising a serial programming algorithm based around the popular SPI 3-wire bus protocol. The Micro-ISP programmer implements ISP of these devices by generating the necessary SPI programming waveforms under control of PC software. In order to place the target device into programming mode, it is necessary to assert the RESET pin of the target microcontroller.

SPI Master/Slave definitions


The Micro-ISP programmer operates on the principle that during any programming operation the programmer is the SPI Master and the target device to be programmed is the SPI Slave.

Micro-ISP Programmer SPI Bus Master

Target ISP Microcontroller(s) ... SPI Bus Slave(s)

This status is only the case during ISP. The target microcontroller can be a master or slave during program execution (i.e. when it is programming code). The programmer tri-states off the SPI bus when not programming.


Typical Hardware Configuration for In-System Programming (ISP) Mode

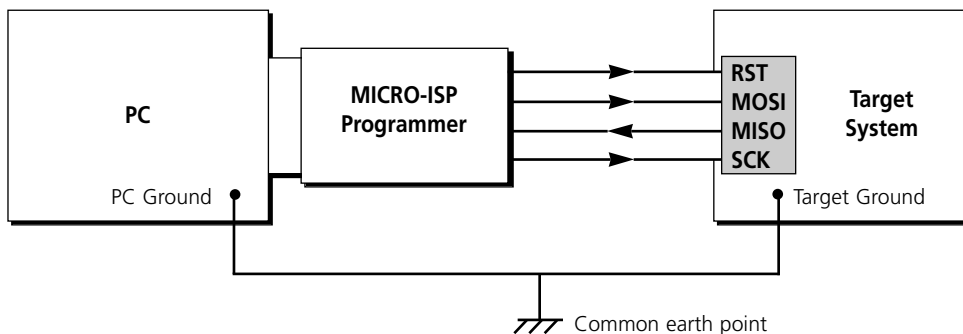

ISP Header (Target System)

Micro-ISP - Target System Connection Details

The programmer 10-way ribbon cable supplied is terminated with a standard 10-way 0.1" pitch IDC plug. This is designed to mate with the complimentary male 10-way IDC header on the target system. The pin-out of the header is shown opposite:

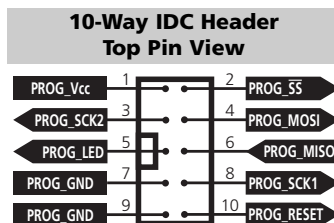

Note: This is the view of the connector fitted to the target (e.g. Evalu8r) board, as seen from above (the component side).

ISP Pin Assignments

Pin	Programmer Name	I/O	Micro-ISP Pin Description	ATmega	MCU	Connect
1	PROG_Vcc	-	Programmer Power (+Vcc)	x	Vcc	Y
2	PROG_SS	O	SPI - Slave Select	x	x	x
3	PROG_SCK2	O	SPI - Serial Clock 2	x	N/C	x
4	PROG_MOSI	O	SPI - Master Output	PD1/RXD	MOSI	Y
5	PROG_LED	O	Program LED	x	x	x
6	PROG_MISO	I	SPI - Master Input	PD0/TXD	MISO	Y
7	PROG_GND	-	Programmer GND connection	x	GND	Y
8	PROG_SCK1	O	SPI - Serial Clock 1	x	SCK	Y
9	PROG_GND	-	Programmer GND connection	x	GND	Y
10	PROG_RESET	O	Target RESET control pin	x	RST	Y

Y = This connection must be made

x = Optional

N/C = No Connect


MCU = AT90S/89S/89LS/ATtiny

Connector recommendations

The IDC connector supplied with the Micro-ISP programmer is 'bump' polarised so that it can not be inserted the wrong way around in a polarised socket. If the connector used on the target system is not polarised, it is advised that measures are taken to prevent the connector being plugged in the wrong way around. This could be achieved by removing pin 9 (a second ground) from the target header and placing a blanking piece of plastic in pin 9 of the cable header.


ISP Cable Converter

This cable allows the Equinox 'Micro-ISP' and 'Activ8r' programmers to interface to existing customer target boards which feature the Atmel 10-way or 6-way ISP header. The converter also makes it possible for users of Atmel's STK200 and STK300 systems to upgrade to the Equinox solution whilst retaining the original evaluation board. The 'ISP Cable Converter' is now supplied with all new Equinox ISP systems as standard.

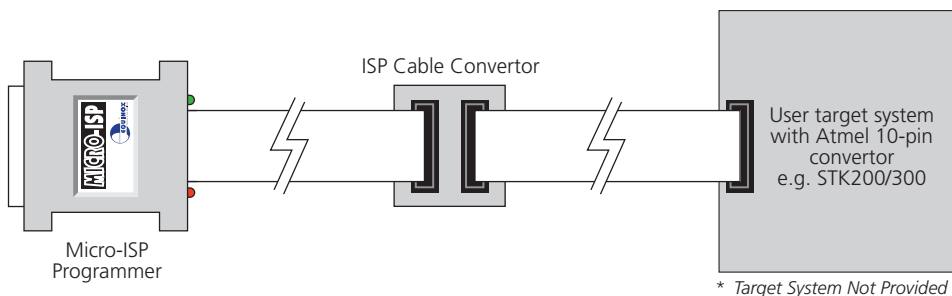

Equinox ISP Pin	Atmel ISP Pin	Function
1	2	Vcc
2	No connection	/SS
3	No connection	SCK2
4	1	MOSI
5	3	/PROG
6	9	MISO
7 and 9	4, 6, 8 and 10	GND
8	7	SCK
10	5	/RESET


Pin Mapping for the Equinox 10-way to the Atmel 10-way ISP

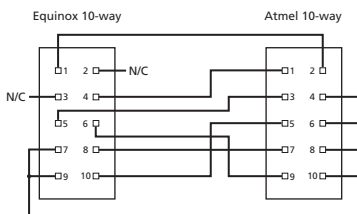

(Cable fitted as standard)

Equinox ISP Pin	Atmel ISP Pin	Function
1	2	Vcc
2	No connection	/SS
3	No connection	SCK2
4	4	MOSI
5	No connection	/PROG
6	1	MISO
7 and 9	6	GND
8	3	SCK
10	5	/RESET

Pin Mapping for the Equinox 10-way to the Atmel 6-way ISP

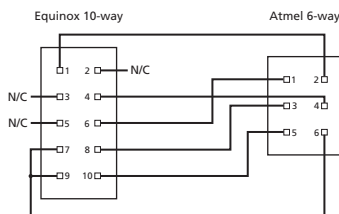

(Cable not fitted as standard)

Target System Requirements

The following target system requirements must be met for the Micro-ISP programmer to operate correctly :

- **Target oscillator**

The target microcontroller oscillator must be running between certain prescribed frequencies. These can be found in the relevant microcontroller data sheets. The oscillator could be an external crystal/resonator or could be an internal RC oscillator (e.g AT90S1200 and AT90S2343).

- **Power**

The Micro-ISP requires a regulated DC supply to operate. This supply can be taken either from the user target system or an external power supply unit (PSU). The programmer should operate correctly between the specified operating voltage limits (see hardware specifications).

- **RESET circuit**

The serial programming mode of the 89S and AVR family devices is initiated by asserting the RESET pin in the correct sense for a certain period of time. The programmer must, therefore, be able to assert the RESET pin on the user target microcontroller. External control of the RESET pin can be implemented in a number of different ways.

Family	Reset Polarity
89S	Active High
AVR (90S)	Active Low
ATmega	Active Low
ATtiny	Active Low

- **SPI Enable Fuse**

The SPI Enable Fuse (SPIEN) must be ENABLED in the target microcontroller device for ISP programming to work. The SPIEN fuse can only be programmed in parallel programming mode with the device in the ZIF socket. All Atmel microcontrollers are supplied from the factory with the SPIEN fuse enabled as default.

Atmel AT89S/89LS - ISP Notes

1. RESET circuit


This should be an 'Active HIGH' RESET circuit. The 89S/89LS devices suffer from many problem in correctly entering 'Serial Programming Mode'. The programmer must output a number of pulses on the RESET pin which synchronise the target device. If a C/R network is used ($C=10\mu\text{F}$, $R=10\text{K}$), the default timings parameters 'T1...T6' should work correctly. However, if a RESET 'Supervisor Device' is used, the timings 'T1...T6' must be altered so that the pulse train is not filtered out by the RESET circuit.

2. SCK connection

This is an output from the programmer and an input to the target device during programming. It is recommended that this pin is only used as an input on the user target circuit. The Atmel 89S/89LS device may fail to re-program if the target firmware asserts the SCK pin LOW within 700ms of coming out of RESET.

3. Protection resistors

It is good EMC design practice to place some limiting resistance on each processor I/O line to protect against damage from transients. i.e. R2, R3, R4, R5. A very low value of e.g. 10 ohms is recommended. Further protection can be afforded by using ferrites instead of resistors. The Atmega devices are very sensitive to the voltage slew rate, so use of any component which slews the edges of the programming signals may cause unreliable programming.

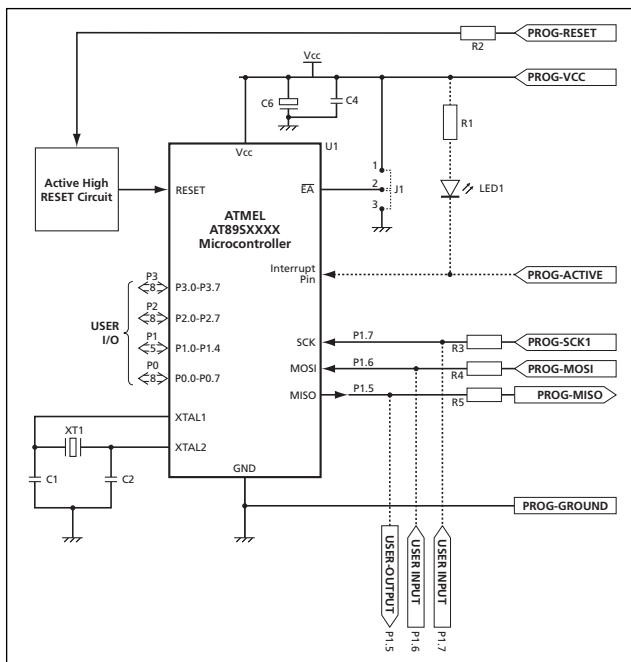

Atmel AT89S/89LS - ISP Notes continued

4. SCK Noise filtering

If noise spikes on the SCK pin are found to be a problem, a resistor i.e. R6 may be inserted between the SCK pin and ground.

5. Active LED

An LED may be placed on the user target system to indicate when the programmer is active. The value of R7 should be chosen to suit the target supply voltage.

Warning !

To avoid lock-up of the target device:

- Avoid writing a ZERO to the SCK pin within 700ms of coming out of RESET.
- Do not use the SCK pin as an output in your own target system.

If the target device will not re-program, connect the EA pin to ground by moving J1 to position 2-3 and then try to re-program. Remove any writes to the SCK pin within your software!

Further sources of information:

AN103 - ISP Design Notes for the Atmel AT89S/89LS Microcontroller Family


ATmega103/603 - ISP Notes

1. RESET circuit

This should be an 'Active LOW' RESET circuit. To prevent inevitable EEPROM corruption, an electronic brownout circuit is recommended such as a 'RESET Supervisor' device available from Dallas Semiconductor, Maxim, Seiko etc.

2. PEN

The programmer does not support the 'PEN' method of entering RESET. The PEN pin should therefore be tied high.

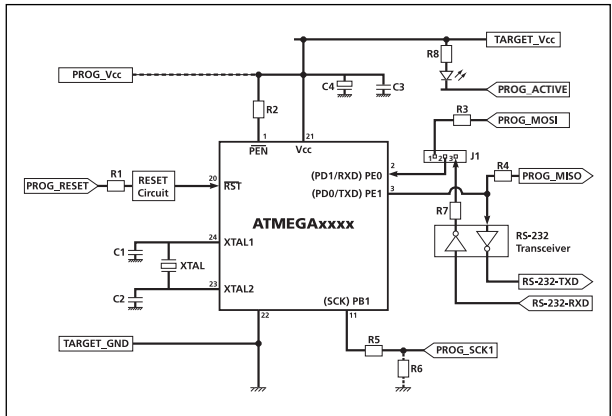

3. MOSI/MISO connections

The Atmega microcontrollers differ from other AVR/89S device in that the ISP programming is performed via the UART pins 'PD1/RXD' and 'PD0/TXD' pins instead of MOSI and MISO. This connection system can lead to driver contention problems with the 'PROG-MOSI' line and the output driver of an RS-232 Transceiver chip. Basically, if the 'RS-232-RXD' line is asserted, the programmer may not be able to assert the 'PROG_MOSI' pin. Possible workarounds include placing a resistor i.e. R5 in the path from the RS-232 transceiver to the RXD pin of the microcontroller or using a jumper i.e. J1 which the user must manually move before attempting to program the device.

4. Protection resistors

It is good EMC design practice to place some limiting resistance on each processor I/O line to protect against damage from transients. i.e. R1, R3, R4, R5. A very low value of e.g. 10 ohms is recommended. Further protection can be afforded by using ferrites instead of resistors. The ATmega devices are very sensitive to the voltage slew rate, so use of any component which slews the edges of the programming signals may cause unreliable programming.

5. SCK Noise filtering

If noise spikes on the SCK pin are found to be a problem, a resistor i.e. R6 may be inserted between the SCK pin and ground.

6. Active LED

An LED may be placed on the user target system to indicate when the programmer is active. The value of R7 should be chosen to suit the target supply voltage.

Further sources of information:

AN100 - ISP Design Notes for the Atmel ATmega Microcontroller Family

Atmel AT90S/ATtiny - ISP Notes

1. RESET circuit

This should be an 'Active LOW' RESET circuit. To prevent inevitable EEPROM corruption, an electronic brownout circuit is recommended such as a 'RESET Supervisor' device available from Dallas Semiconductor, Maxim, Seiko etc.

2. SCK connection

This is an output from the programmer and an input to the target device during programming. It is recommended that this pin is only used as an input on the user target circuit. However, it should still be possible to program the device even if the pin is set to an output by user firmware.

3. Protection resistors


It is good EMC design practice to place some limiting resistance on each processor I/O line to protect against damage from transients. i.e. R2, R3, R4, R5. A very low value of e.g. 10 ohms is recommended. Further protection can be afforded by using ferrites instead of resistors. The ATmega devices are very sensitive to the voltage slew rate, so use of any component which slews the edges of the programming signals may cause unreliable programming.

4. SCK Noise filtering

If noise spikes on the SCK pin are found to be a problem, a resistor i.e. R6 may be inserted between the SCK pin and ground.

5. Active LED

An LED may be placed on the user target system to indicate when the programmer is active. The value of R7 should be chosen to suit the target supply voltage.

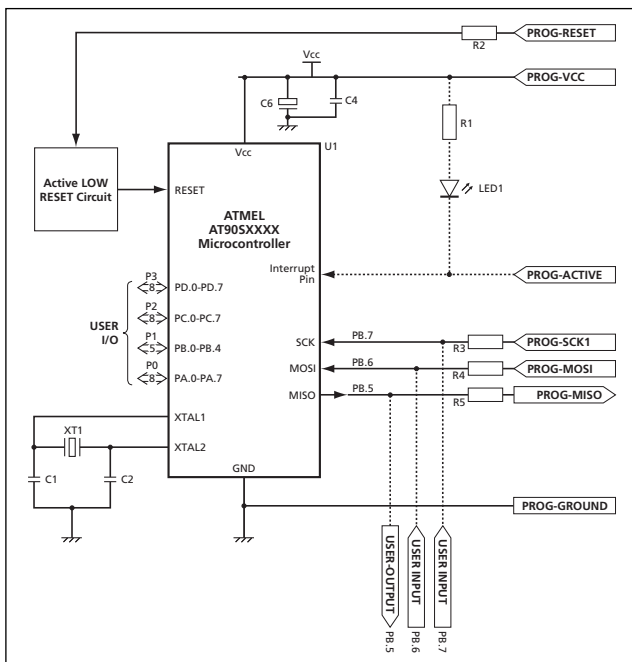

Further sources of information:

AN102 - ISP Design Notes for the Atmel ATtiny (AVR) Microcontroller Family

Upgrading the programmer firmware

This programmer features upgradable firmware technology which allows the actual control code within the programmer to be updated in the field. Upgrading the programmer firmware allows new features, new device algorithms and bug corrections to be added to the product in the future by means of a straightforward Windows reprogramming utility, without having to return the product to Equinox. All new programmers are shipped with the latest firmware from Equinox, but if your system has been purchased from a distributor and has been in stock for a long period of time, it may be that the firmware version is out-of-date.

How do I check what version of firmware my programmer is running?

- i. Make sure the programmer is plugged into a spare COM port and is powered up
- ii. Launch the Meridian software -> The software should display "On Line"
- iii. Select <Options><Programmer Info> -> The firmware revision and date of loading are displayed.
- iv. Alternatively, select <Options><Create Library Info> and a text file is created containing all the programmer settings

How do I update the programmer firmware?

If the firmware version of your programmer is older than that on the Equinox Web Site, please download the new files from the 'Software Updates' page. It is important that you download both the latest 'meridian.exe' and 'configit.exe' programs. If you follow the instructions supplied with the 'configit.exe' program, the whole process should take less than 2 minutes.

What do I do if there are any problems?

If the firmware update fails for any reason, please check the instructions supplied with 'configit.exe' in the first instance. If the problem persists or the program reports that a code is needed from Equinox, please e-mail or fax the full details below to Equinox, and we will attempt to get you up and running as quickly as we can.

Details required:

Name, Company name, telephone number, fax number, e-mail, place of purchase, programmer serial number (usually printed on a label on the programmer) and any update code you are prompted to send.


Please note: It is possible that the firmware upgrade process may fail and there might be a delay in receiving license codes back from Equinox. **PLEASE DO NOT** attempt to upgrade your firmware if your immediate design process depends on it!

Micro-ISP Compatible Target Systems

The products listed below have been specially designed to interface with the Micro-ISP programmer


- **AVR/89S ISP Socket Stealer Modules**

Plugs into most 40-pin DIL generic AVR/89S microcontroller sockets. Ideal for AVR/89S ISP evaluation and small production runs where target board redesign would be more expensive or where time constraints have been imposed.

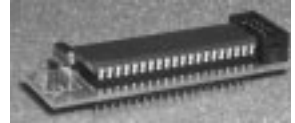

- **Microcontroller Personality Module**

This dedicated Microcontroller Personality module supports most 8-pin, 20-pin and 40-pin Atmel 8051 & AVR microcontrollers. The module features an ISP header which connects to the 'Micro-ISP' programmer. The pod can be plugged into either the 'Evaluation' module for running the simple examples or into a separate 'Prototyping' module where the developer may construct his/her own circuitry for a 'real' project.

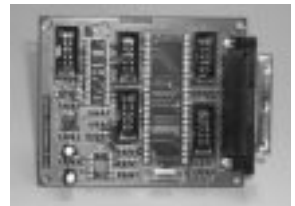

Troubleshooting Guide

1 Installation problems

- Does your PC meet the minimum PC requirements of this product?
- Do you have spare PC serial port?
- Have you connected the serial cable from the PC COM port to the Micro-ISP?
- Have you selected the correct COM port?
- Is the serial port already in use by another application?

2 In-system programming (ISP)

- Are the MOSI, MISO, SCK1 and RESET connection from the target system correctly wired?
- Does the target RESET circuit allow remote control of the RESET line from the Micro-ISP?
- Is the target system powered up to the correct voltage?
- Is the target microcontroller ISP enabled (i.e. SPIEN = ENABLED)?
- Is the target oscillator (internal or external) running?
- Is the target SPI frequency correct for the target oscillator frequency being used?
- Is the FLASH and EEPROM write times set to the correct value for the target voltage?

3 AT89S ISP Problems

Symptom:

Virgin device programs once and then will not re-program. (Error message 'Can not program location 0000h')

Workaround:

- Connect the EA pin of the target device to ground. (forces microcontroller to execute from external memory)
- Remove any code in your firmware which writes to the SCK pin or add a delay from RESET to writing to the pin of < 700ms.
- Re-program the device (should now be successful)

4 ATmega ISP problems

At the time of this manual going to press, the ATmega103 microcontrollers would not erase correctly below 3.4V and would not program reliably below 3.7V. Future revisions of silicon should hopefully cure these problems.

5 AT90S/AT90LS/ATtiny ISP Problems

At the time of this manual going to press, the ATmega103 microcontrollers would not erase correctly below 3.4V. Future revisions of silicon should hopefully cure this problem.



The Embedded Solutions Company

Equinox Technologies UK Limited reserves the right to change any information contained within this manual without prior notice. E&OE

Terms and product names contained in this document may be trademarks of others.